

The ERG017 - PolyCut Safety Cutter

Thank you for choosing the ERG017 PolyCut Safety Cutter, the PolyCut has been designed to provide a durable but light and convenient cutter, which through an enclosed blade maximises cut protection. Although disposable used correctly it should provide a good life. Detailed below are some simple measures which will help keep the user safe and achieve the best life from the knife.

User Information/Instruction Sheet

- The knife is designed to cut Films (such as Shrink Wrap, Bubble Wrap, Cellophane) Plastic Strapping, Packing Tapes, Paper and light Card (paper and card have more aggressive wear characteristics so blade life will be shorter).
- Never modify the knife, it has been designed to have no maintenance, any modification could lead to sharp blades damaging people and or products and contamination of products.
- Never cut towards yourself – always cut away from the body considering others in the area.
- Never use the knife to cut materials that it has not been designed for.
- Never use the knife as a lever, it is a cutting device.
- Always report any damage to the knife and replace it immediately
- Always change the cutter when the blade(s) become blunt (a blunt blade requires more effort, slows the operation and increases the likelihood of accidents).
- Always let the blade do the work, positioned correctly a sharp blade will cut with ease; applying large effort will damage the knife and product as well as lead to more accidents.
- Although the blade is enclosed care should be taken to grip the cutter on the plastic body and not in the blade groove.

Knife Operation

General Use

The ERG017

